





Recorder Operation

 Press PLAY/STOP to start or pause playback. Status LED turns solid green during playback.

 Press RECORD to start recording. Status LED turns solid red. Press PLAY/STOP to stop.

 Pressing PREVIOUS will replay a track OR play a previous track, until the first track is reached.

 Pressing NEXT will play the next track, until last track is reached.

For Best Results

• Use micro SD cards from known brands, with these labels (or better):



• To insert the card, push the card into the socket until it clicks into place. Push again to eject.

• Do not eject the card while recording. Data will be lost. Press PLAY/STOP before ejecting.

• Cards larger than 32GB should be formatted with R4R before use. Warning: Formatting will erase all data on the card.

PLAY/STOP

NEXT

PREVIOUS

USB
AUDIO
PORT



RECORD

STATUS

Micro SD

CHARGING &
DISK DRIVE
PORT