

 +  **Format SD card**

- Make sure the unit is OFF. Insert SD card into R4R.
- Press and hold RECORD button, then turn the unit ON.
- When status LED turns RED, release RECORD button.

Status LED starts blinking RED to require confirmation:

- To cancel SD card formatting, turn OFF the R4R.
- To confirm formatting the card, push PLAY/STOP button.


LED turns ORANGE – formatting is in progress.

LED turns GREEN – formatting is complete. Turn the unit OFF, then ON. Now you are ready to record.

LED changes to RED – formatting failed. Change SD card.

 +  **Disk Drive mode**

- Make sure the unit is OFF. Insert SD card into R4R.
- Press and hold PLAY button, then turn the unit ON.
- When status LED turns GREEN, release PLAY button.
- Connect a USB cable to the right (charging) USB jack.
- Computer will now see R4R's SD card as a disk drive.
- To exit Disc Drive mode, first eject USB storage device on the computer, then turn R4R OFF and back ON.

 **Updating internal clock**

- Save a blank file called "R4TIME.txt" onto the SD card.
- Insert this SD card into the R4R and then turn R4R ON.
- R4R will now have the correct time/date for recording.

If status LED is blinking, consult the user manual.